


Dual Function LED Exterior Wall Pack with Integral Battery Series EOE-BB

## **INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL**

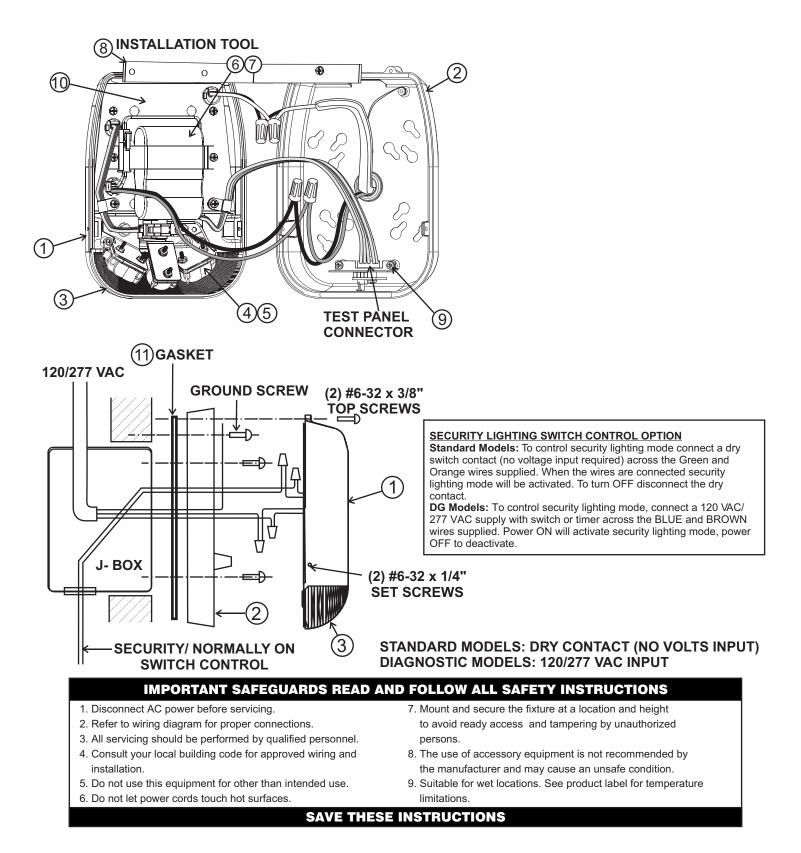


Mule Lighting , Inc. 46 Baker Street Providence, RI 02905 800 556-7690 P 401 941-2929 F www.mulelighting.com



## Dual Function LED Exterior Wall Pack with Integral Battery Series EOE-BB

Product is supplied assembled. To separate Housing and Base, remove two #6-32 screws at top of housing and back out two #6-32 set screws on each side.

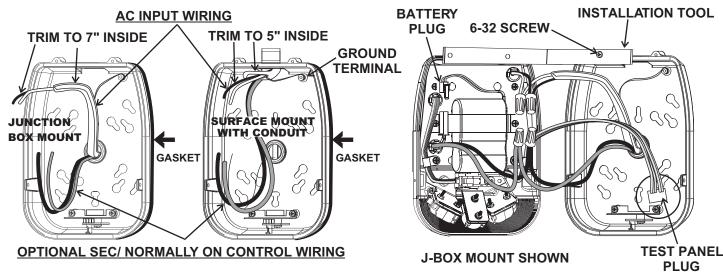


1. Route AC wiring into j-box or via external conduit. For j-box mount, remove knockouts as required. Route AC wiring through gasket and into Base, secure to j-box or surface. Trim and shape AC wiring and optional SEC/Normally On switch control wiring as shown. Connect AC GROUND wire to screw boss provided.

When set at the factory, no SEC control wiring is provided and fixture will operate in continuous SEC mode when AC power is applied. To set continuous SEC mode when control wiring is supplied:

Standard Models: Connect ORANGE-GREEN control wires together. DG Models: Connect BLUE control wire to the normal AC input (BLACK) and

connect the BROWN control wire AC neutral (WHITE).



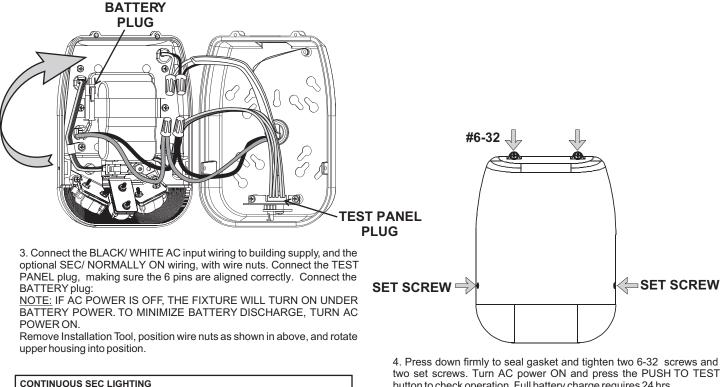

button to check operation. Full battery charge requires 24 hrs.

Mule Lighting , Inc. 46 Baker Street Providence, RI 02905 800 556-7690 P 401 941-2929 F www.mulelighting.com

-2-