



## CAUTION: EXTERNAL ILLUMINATION SOURCE REQUIRED IMPORTANT SAFEGUARDS. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Minimal external illumination – 5 foot-candles (54 lux) of LED, fluorescent, metal halide or mercury vapor light.

- The sign should be charged for minimum 60 minutes to obtain full operation conditions.
- The sign should be mounted in a manner that ensures rigidity and mechanical sufficiency.
- External illumination source must be reliable and supplied by a circuit not controlled by automatic timers or sensors and whose controls are accessible only to authorized personnel.
- External illumination source is to be energized at all times during building occupancy.
- Lighting levels on the sign face(s) should be confirmed after any change in external lighting types or levels.
- It is recommended that periodic inspections be performed in accordance with all applicable codes.
- Install this sign indoors only, where not exposed to direct sunlight, liquid spray or temperatures outside the range of +10 ° to 40°C.
- Cleaning of the sign face(s) with a damp cloth is recommended during monthly inspections
- When a retrofit involves the replacement of existing electric exit signs the electric junction box must be sealed with an approved blank cover plate before the installation of our Eco Exit Sign.
- Exit signs are approved by UL for Floor Proximity Installation.

### ACTIVATION:

MINIMUM 5 FOOT-CANDLES (54 LUX) OF LED FLUORESCENT, METAL HALIDE OR MERCURY VAPOR ILLUMINATION MUST BE PRESENT ON THE SIGN FACE AT ALL TIMES DURING BUILDING OCCUPANCY

### VIEWING DISTANCE:

50-FOOT VIEWING DISTANCE

### INSTALLATION:

FOUR (4) MOUNTING HOLES PROVIDED ON THE SIGN OR ON THE FRAME. MARK THE MOUNTING SCREW LOCATIONS ON THE WALL. DRILL ANCHOR HOLES, INSERT ANCHORS THEN INSTALL SIGN USING SCREWS THROUGH FOUR (4) MOUNTING HOLES. IF USING FRAME, INSERT SIGN INTO FRAME.

### DIRECTIONAL INDICATORS:

TWO (2) SELF-ADHESIVE DIRECTIONAL INDICATORS ARE PROVIDED WITH EACH SIGN THREE (3) DOTS ARE DISPLAYED TO THE LEFT OF THE LETTER “E” AND TO THE RIGHT OF THE LETTER “T” FOR EASY ALIGNMENT. SIMPLY PEEL THE RELEASE LINER FROM THE DIRECTIONAL INDICATOR(S) AND ALIGN THE THREE (3) POINT WITH THE THREE (3) DOTS AS NEEDED.

## EVER BRITE® PHOTOLUMINESCENT EXIT SIGNS

MODELNUMBER7210 RED LETTERS (directional indicators)  
MODEL NUMBER 7211 RED LETTERS (directional indicators)  
MODELNUMBER 7220 GREEN LETTERS (directional indicators)  
MODELNUMBER 7280 RED LETTERS (directional indicators)(no frame included)  
MODELNUMBER 7310 RED REFLECTIVE LETTERS (directional indicators)  
MODEL NUMBER 7320 GREEN LETTERS (directional indicators)

Mule Lighting, Inc  
tel: (800) 556-7690 fax: (401) 941-2929  
www.mulelighting.com

– SAVE THESE INSTRUCTIONS FOR FIRE SAFETY INSPECTIONS –