

# INSTALLATION INSTRUCTIONS FOR LED REMOTE HEAD

## IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

*When using electrical, basic safety precautions should always be followed including the following.*

1. Disconnect power at fuse or circuit breaker before installing or servicing.
2. Suitable for Wet location.
3. Do not mount in hazardous locations, or near gas or electric heaters.
4. Do not let power cords touch hot surface.
5. Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
6. The use of accessory equipment not recommend by the manufacturer may cause an unsafe condition.
7. Do not use this equipment for other than intended use.
8. All servicing should be performed by a qualified personnel only.

## SAVE THESE INSTRUCTIONS

### Instruction

Connect wires to DC 3~12V supply in accordance with local and national code, yellow wire is for positive, purple wire is for negative.

**Notice:** This remote head is constant power, have to match specified emergency battery backup equipment recommend by manufacturer, if use other manufacturer's emergency unit, have to test and confirm discharge time in advance.

### Model List and Ratings

| NO | Model List    | Lamp Head   | LED source | Lumen output |
|----|---------------|-------------|------------|--------------|
| 1  | R-ASRLED-1-WP | Single head | 1W*1       | 110 lm       |
| 2  | R-ASRLED-2-WP | Dual head   | 1W*2       | 220 lm       |

### Wiring Diagram

