

# INSTRUCTION FOR SELF - DIAGNOSTIC TEST:

## 1. Introduction

Once the unit is properly installed according to the installation instruction sheet and AC power supplied it will come ON. The dual color LED indicator will also come ON and the self-diagnostic test function will automatically initiate. The LED indicator points out the current unit status. A STEADY GREEN on the LED indicates a normal service; BLINKING GREEN indicates that the unit is in testing mode; GREEN/RED FLASHING indicates that the battery is charging; RED (in different combinations) would indicate a fault or a service alert. Refer to the section 3-Fault Indication for more details. The indicator would be OFF when the unit is in emergency mode.

## 2. Self - Diagnostic Service

The self-diagnostic function is factory preset without any allowable field adjustment. The automatic self-diagnostic feature serves the following tests

- On-line real time monitoring of battery and lamps (both local and remote) : identifies battery charging, disconnection and failure along with local and remote lamp failures.
- Self-testing and a 15-minute discharge once in every 30 days, after AC power has been supplied for a minimum of 24hrs.
- Self-testing and a 90-minute discharge once in every year, after AC power has been supplied for a minimum of 24hrs.

## 3. Fault Indication

Fault Description	LED Indication
Battery disconnection	STEADY Red
Battery recharge failure	FLASHING Red
Battery failure	Red BLINKING '2' TIMES
LED failure (Exits only)	Red BLINKING '3' TIMES
Remote lamp failure (Emergency lights only)*	Red BLINKING '4' TIMES
Conversion system fault	Red BLINKING '6' TIMES

\*- Some applications, for emergency lights, might not require the remote lamps to be used. In such cases, the LED indicator would be constantly BLINKING Red '5' times indicating a fault. In order to by-pass the remote lamps, the PCB must be carefully pulled out from the unit and the purple wire (protruding from the board) should be plugged into the slot Re - L1- on the board. The purple wire already plugged into the slot must be pulled out. Contact factory for further assistance.



## 4. Manual Testing

The unit also provides for manual testing by pushing the test button in a specific pattern. The different patterns and the resulting tests are listed in the table below.

Action	Reaction & LED Indication
Push test button Once (within 2 seconds)	30-second test: FLASHING Green
Push test button Twice (within 2 seconds)	15-minute test: Green BLINKING twice
Push test button Three times (within 2 seconds)	90-minute test: Green BLINKING three times

## 5. OPERATION

- During an electrical power failure, the lamps on the unit will automatically come ON for a minimum of 90 minutes.
- To test this unit, let it charge correctly with AC power supply for a minimum of 24 hours after its first installation and then depress the "TEST" switch, the emergency lamps will illuminate. When the switch is released, the lamps will turn OFF.
- For the unit with Self-Diagnostic, must connect as below:
  - When customer doesn't need remote lamp, please insert terminal to N. (See Figure 1 below)
  - When customer needs remote lamp, please insert terminal to Y. (See Figure 2 below)

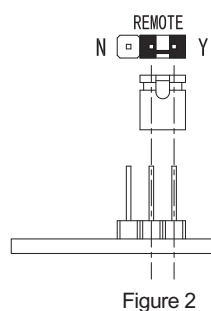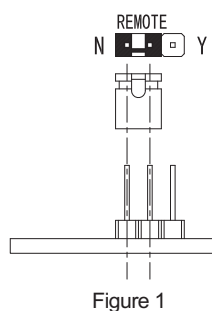

## **WARNING:**

- i) Make sure that power is OFF before making any Electrical Connections.
- ii) Unused wires must be capped using enclosed wire nuts.

**Note** – During the recharge period, a faint light from the LED lamp heads may be visible in a dark environment. This is normal, and does not affect the operation of the light.